

CLEANING THE BRAKE ROTORS: 6 STEPS

1

Secure the vehicle on a flat surface and engage the parking brake.

2

Remove the wheel lug nuts using a lug wrench or impact gun and carefully remove the wheel from the vehicle.

3

Locate the brake rotor behind the caliper, which is attached to it with bolts.

4

Spray a specialized brake cleaner onto both sides of the rotor until it's completely soaked.

5

Use a wire brush and apply moderate pressure to scrub away any rust or grime that has accumulated on its surface.

6

Wipe down both sides of your brake rotors with a clean towel to make sure they are dry before replacing tires.